




BANNER IMAGES

Illustration #3: Installation of Ny-Ties

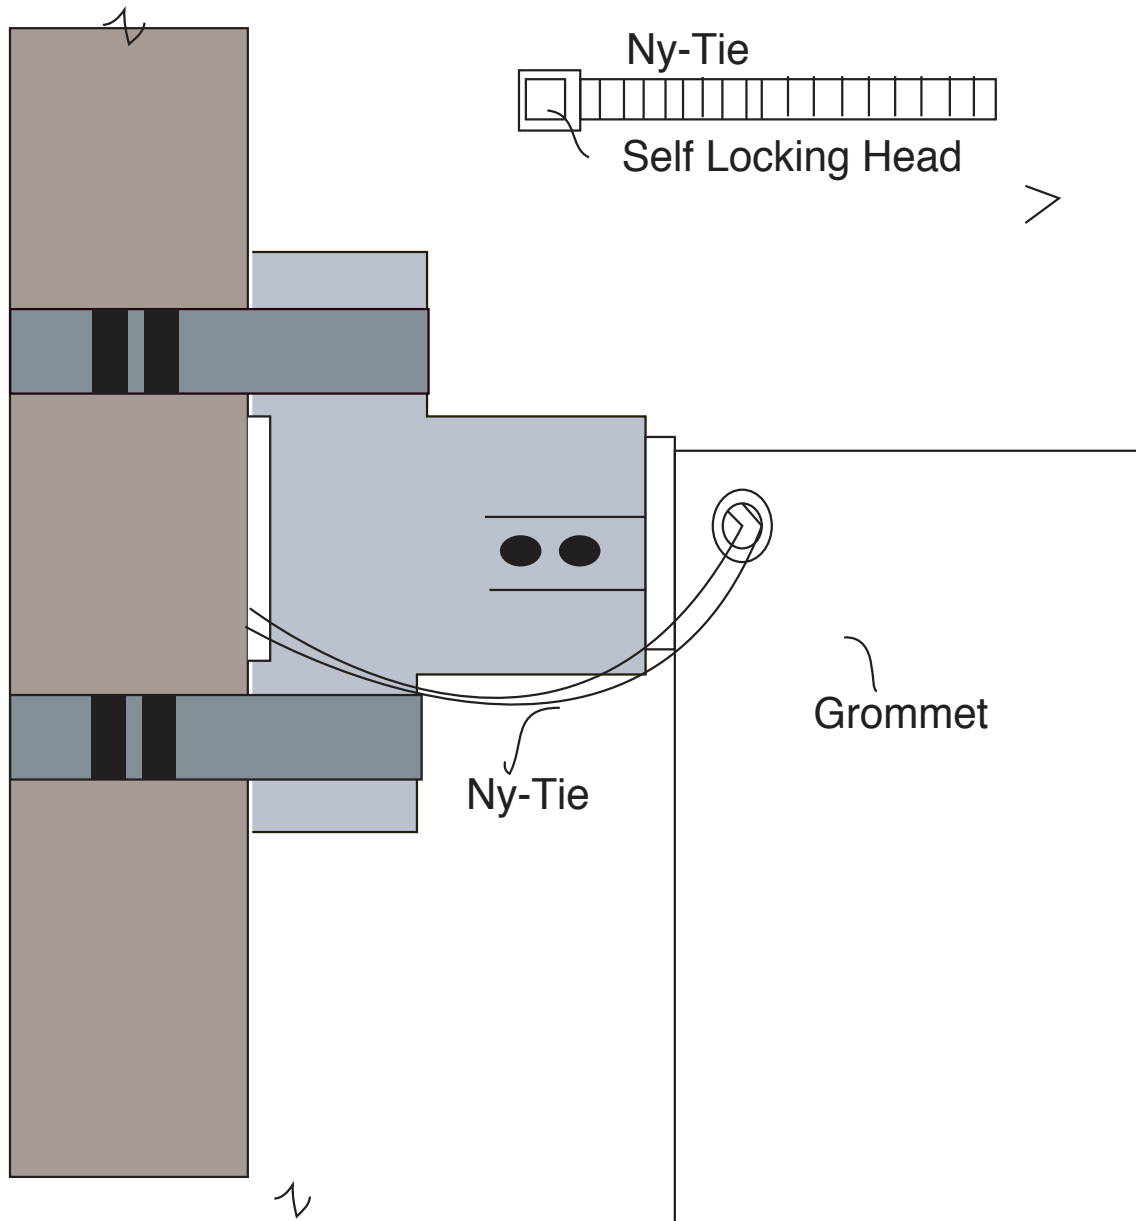

Instructions: Slip the Ny-Tie through the banner grommet hole and through the opening at the base of the bracket. Slide the end of the Ny-Tie through the self locking head at the other end of the Ny-Tie. Pull snug and cut off excess length.

Note: Once the Ny-Tie has been put through the self locking head it cannot come undone and needs to be cut-off.